



# Oplemenjavanje užih strana ploča

# Vrste lepkoiva

- Termoplastični – topljivi
- Disperzioni
- Kondenzacioni
- Kontaktni
- EVA
- PVA-c
- KF
- PUR


# Postupci oplemenjavanja

- HH
- VH
- VHR
- HV
- HA


## MATERIJLA ZA OPLEMENJAVANJE

- Furnir
- Folija
- Laminat
- Masiv


# Hladno hladni postupak

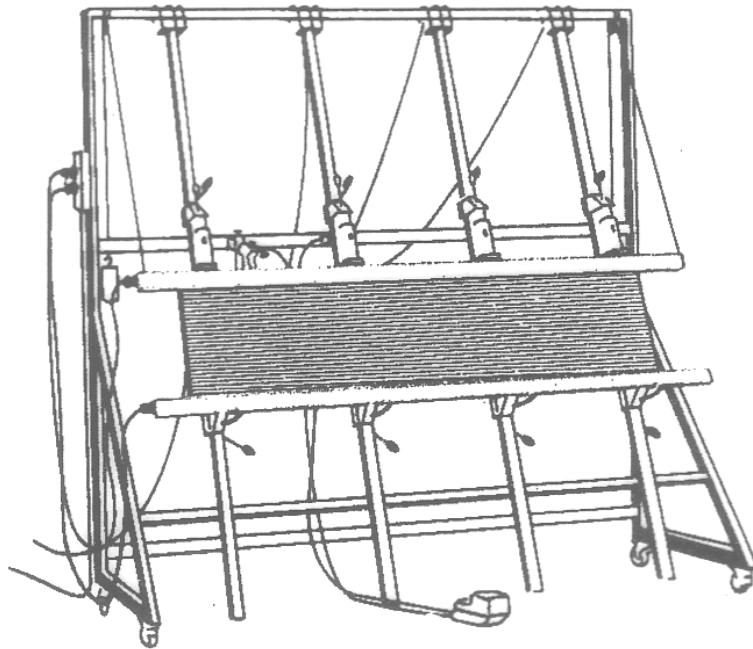


# Vruće hladni postupak

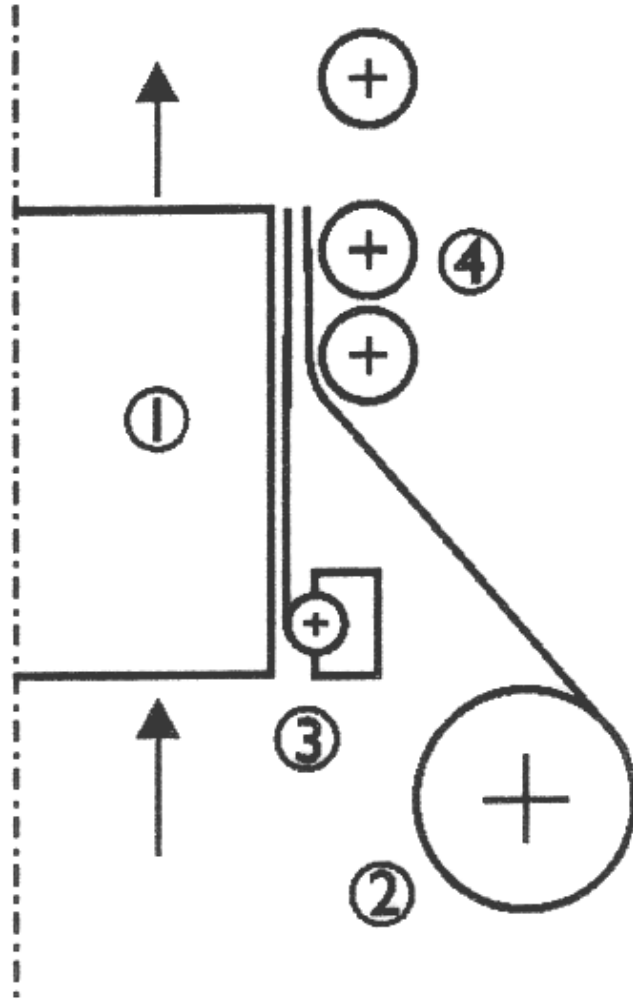


# Vruće hladni reaktivni postupak

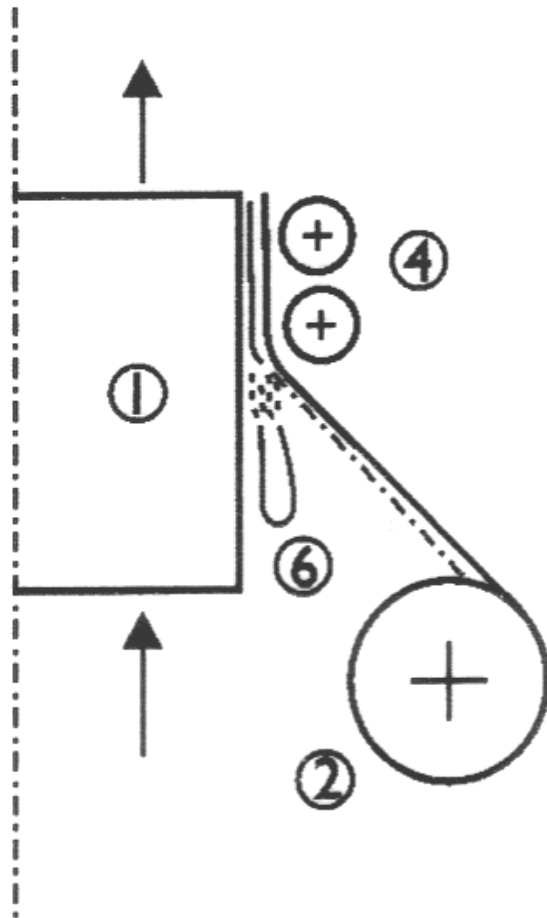


# Hladno vrući postupak




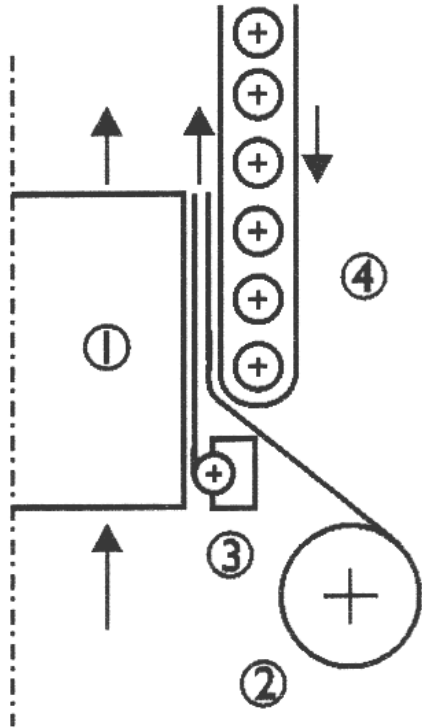







# Hladno aktivirajući postupak

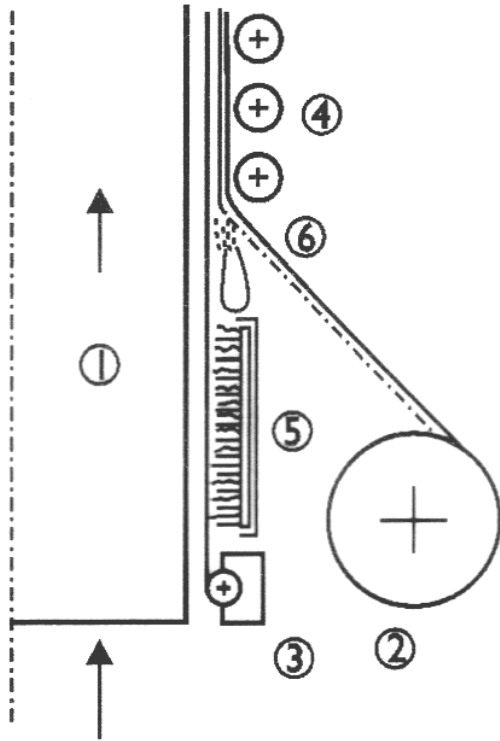










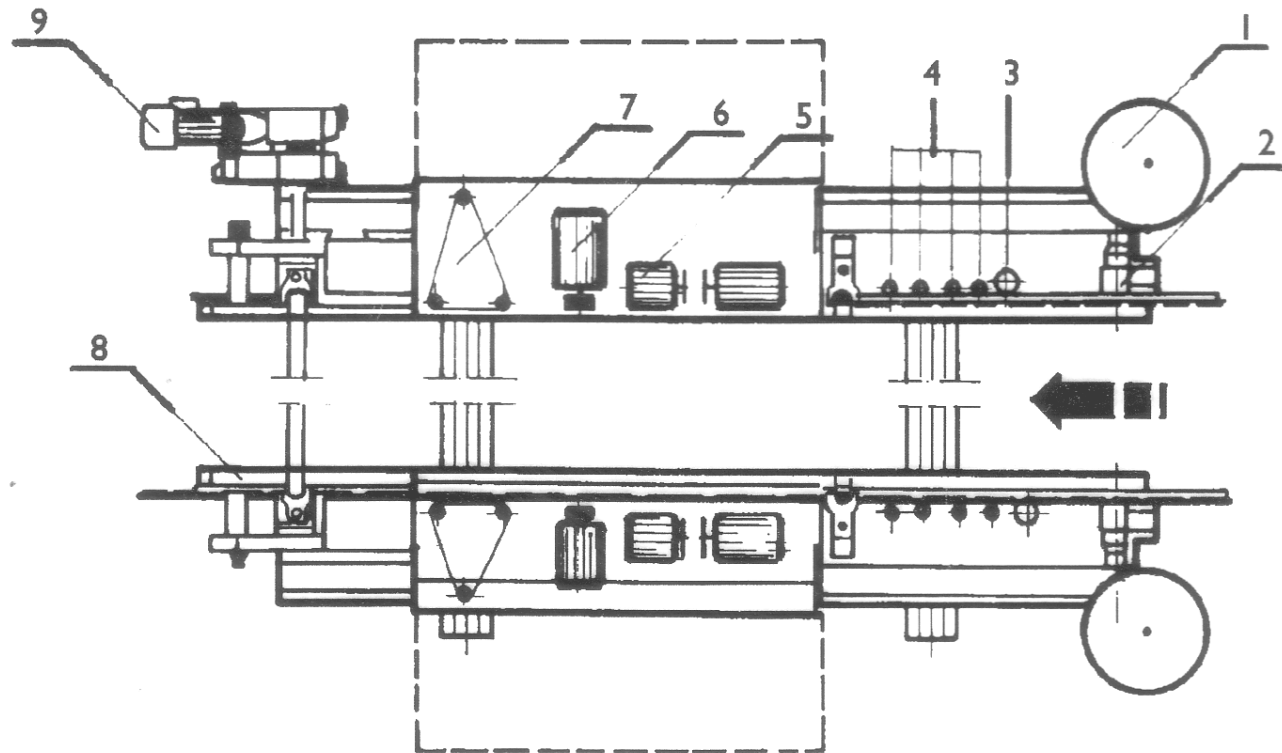

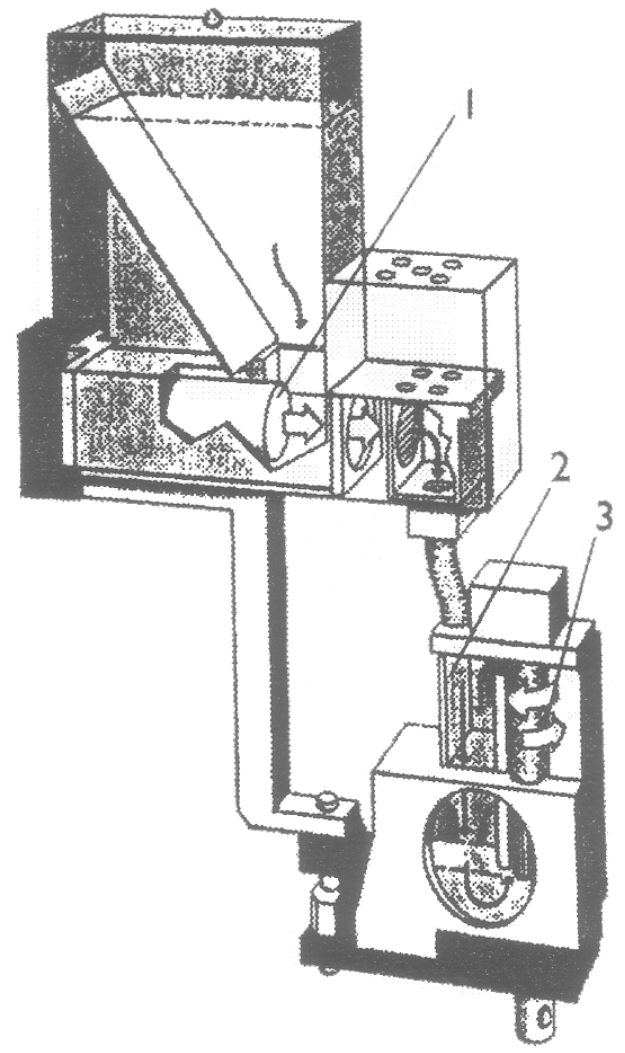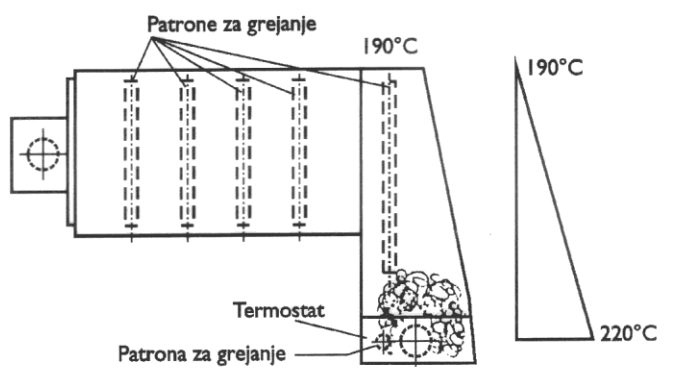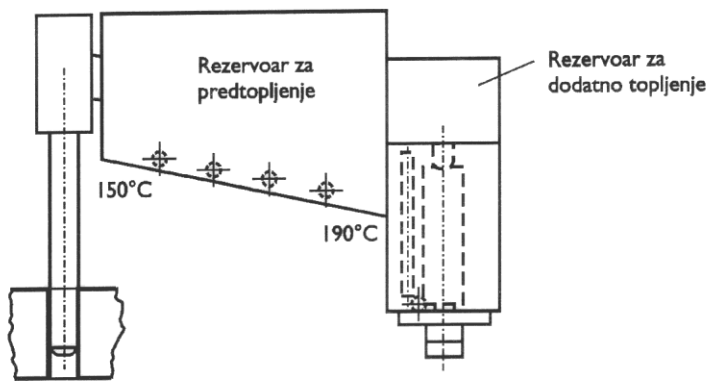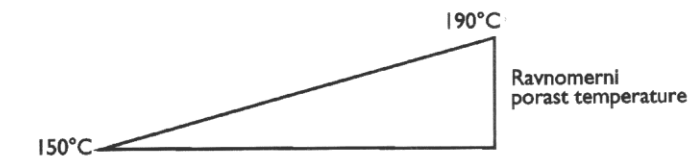

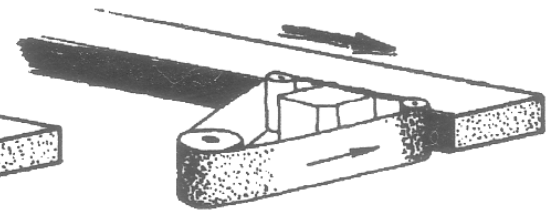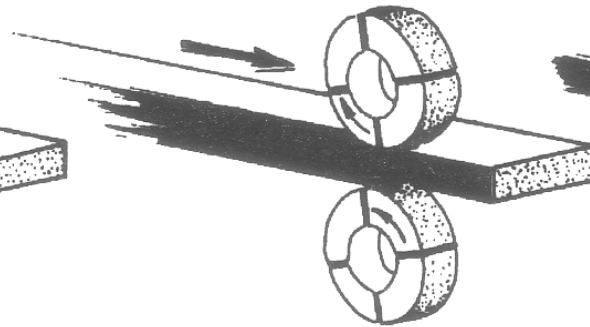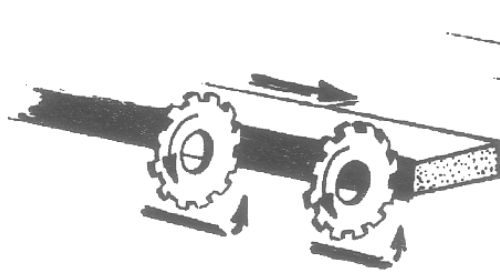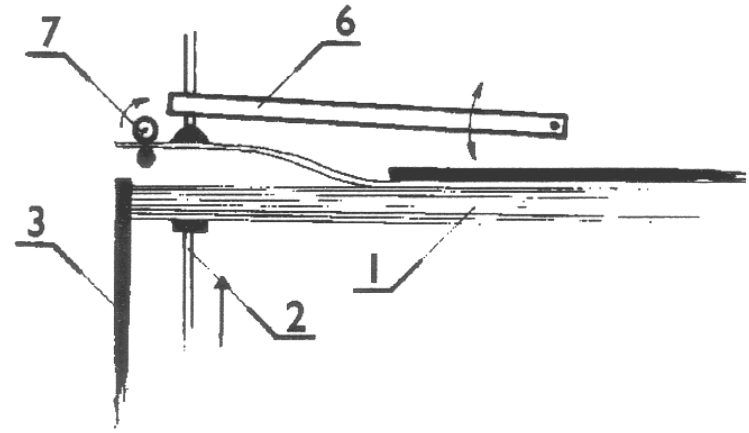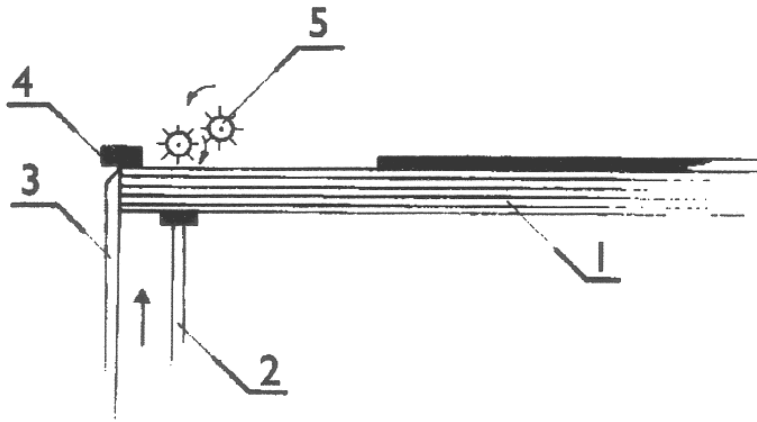


# Oplemenjavanje profilisanih robova ploča sa pravolinijskim konturama - Softforming

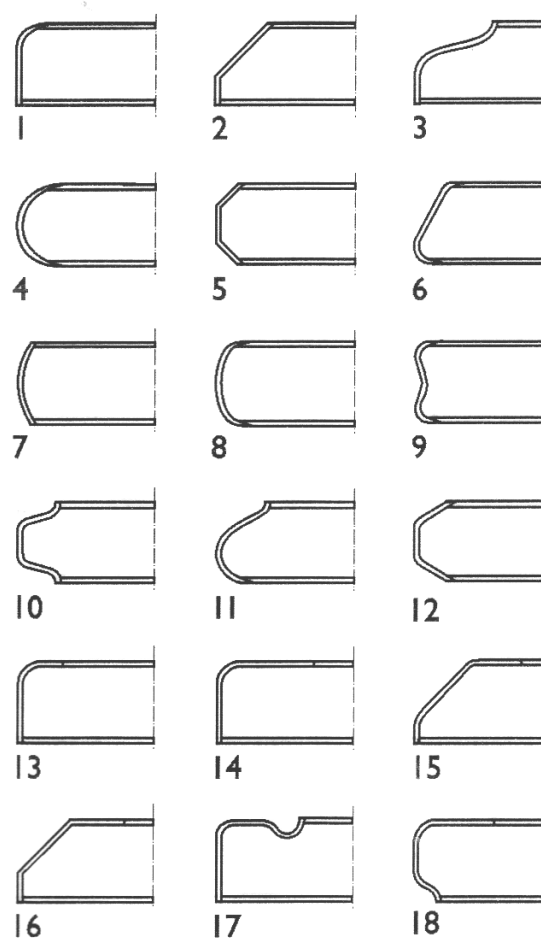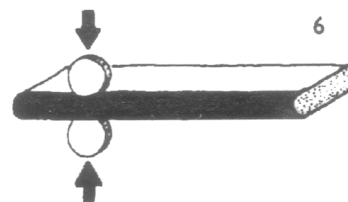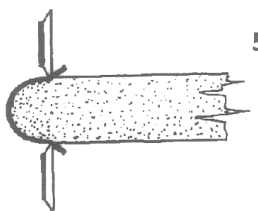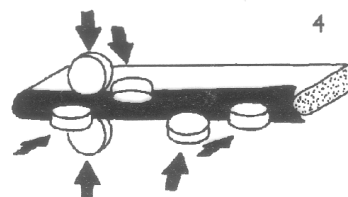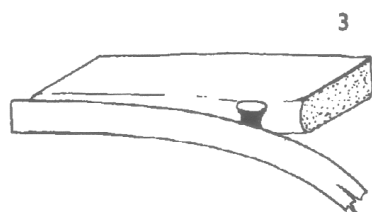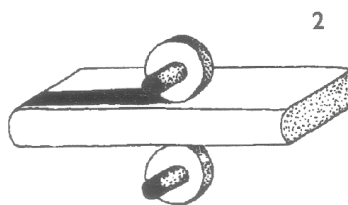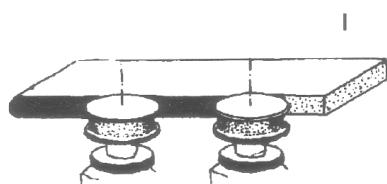

# Oblaganje ploča laminatima

*oblaganje širih strana*

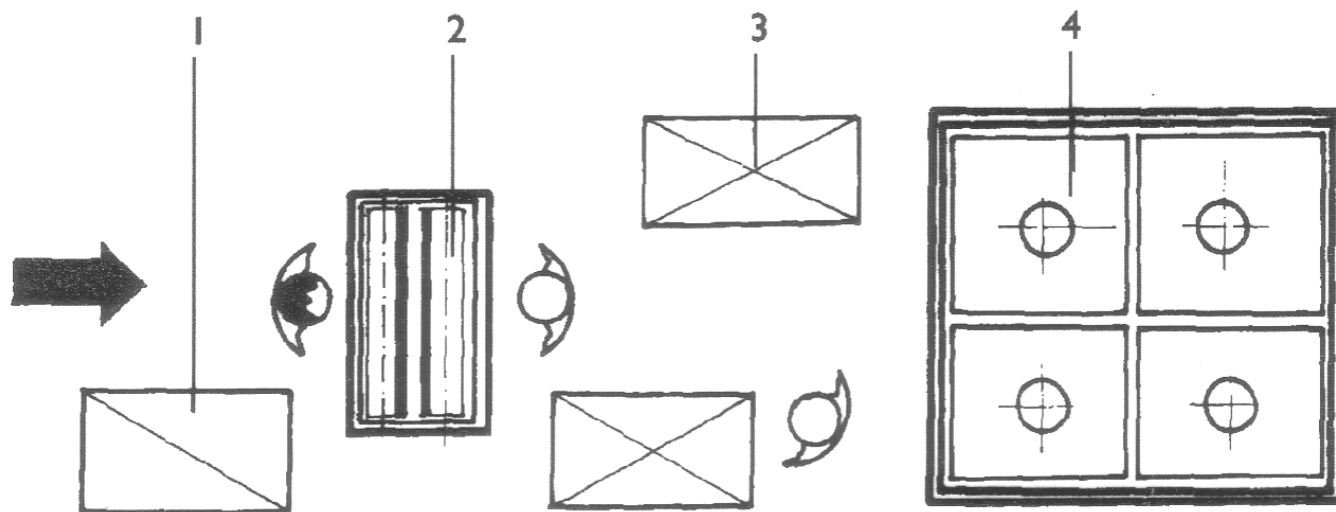

# Oblaganje uskih profilisanih površina- Postforming

